



**FRONT**

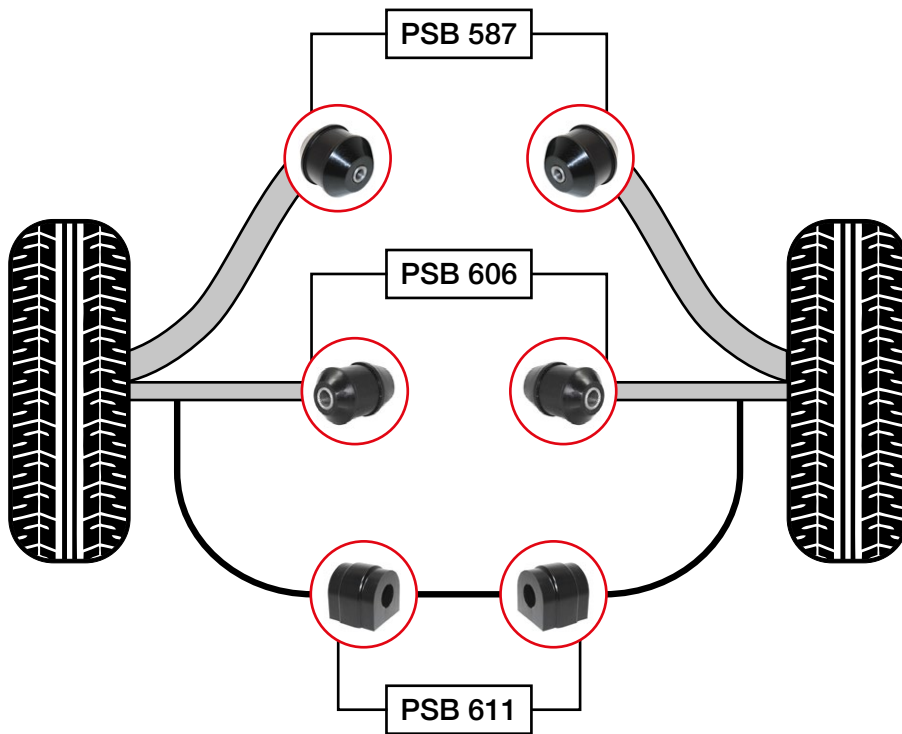

**REAR**

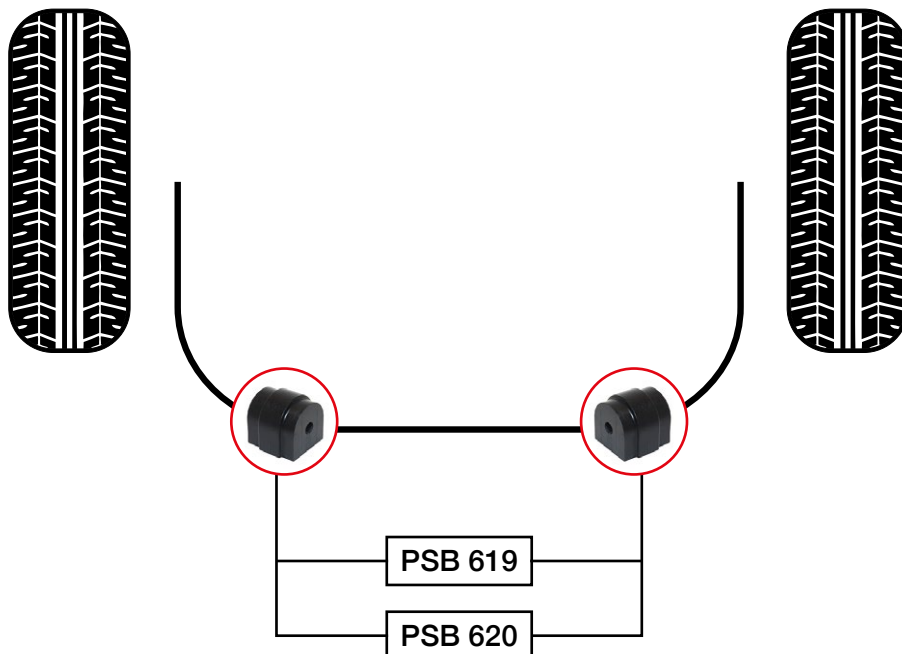

**PSB 587**

Front Strut Rod Bush - Right or Left (Aluminium Bar)  
OE Number: 31126769797 / 31126769798

**PSB 606**

Front Lower Control Arm Bushing (Aluminium Arm)  
OE Number: 31126770849 (L) / 31126770850 (R)

1. Remove worn OE bushing by pressing out or using a blow torch.
2. Ensure outer metal casing of original rubber bushing is removed, which can be done by cutting with a hacksaw and knocking out with a chisel
3. Clean housing with sand paper to remove sharp edges, so as not to damage new bushing.
4. Remove metal sleeve from new poly bushing.
5. Lubricate inside and outside of new poly bushing with multi-purpose grease.
6. Press new bushing into the arm, ensure the most tapered flange faces the arm when pressing in the new poly bushing.
7. Bench vice or mechanical press can be used
8. Once the bushing is inserted, tap the metal sleeve into the bushing, using a rubber mallet.
9. The new bushing installation is now complete.

**PSB 611**

Front Anti Roll / Sway Bar Bush - 26.5mm  
OE Number: 31356765574

**PSB 619**

Rear Anti Roll / Sway Bar Bush - 11mm  
OE Number: 33536765584

**PSB 620**

Rear Sport Anti Roll / Sway Bar Bush - 13mm  
OE Number: 33556761002

1. Remove metal bracket of original rubber bushing.
2. Remove old rubber bushing and clean bar.
3. Find slit on new poly bushing and slide over the bar.
4. Refit metal bracket.
5. The installation is complete.